


OPERATION INSTRUCTION

LED SEARCH LIGHT

SM2209

Specifications

- 60W high power output
- 60° tilt, 360° Rotation
- Perfect wire controlled / remote controller designed, easily adjust speed, rotation
- Beam Pattern: Spot
-

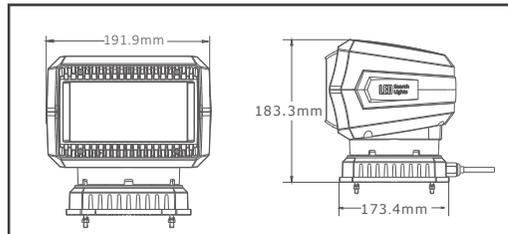

- Proper installation of this product requires the installer to have a good understanding of automotive electronics, systems and procedures.
- Failure to use specified installation parts or hardware will void the product warranty.
- For this product to operate at optimum efficiency, a good electrical connection to chassis ground must be made.
- It is recommend that these instructions be stored in a safe place and referred to when performing maintenance or reinstallation of this products.
- Do not install and/or operate this safety product unless you have read and understand the safety information contained in this manual.




This document provides all the necessary information to allow your product to be properly and safely installed. Before beginning the installation and operation of your new product, the installation technician and operator must read this manual completely.

Wire Control Instruction Manual

This manual describes how to use the remote search light.

In this manual you will learn about:

1. Basic function of the wire control;
2. Connect the light to wire control.

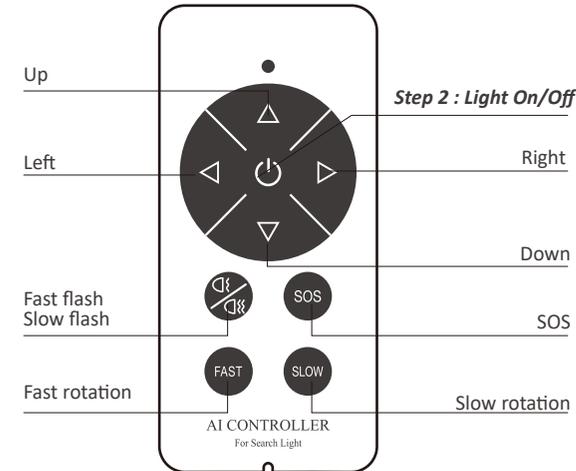

Basic functions

Only on condition that the light is connected to wire control, it can be wire controlled.

- On: Turn on the light;
- Off: Turn off the light;
- Up: Head up;
- Down: Head down;
- Left : Turn left;
- Right: Turn right;
- Fast rotation: Fast speed rotation;
- Slow rotation: Slow speed rotation.



Android



iOS